

Vane probe thermo-anemometer LV 101 - LV 107 - LV 110



"Select" key

See table
"Functions available from main screen"

"Function" key

- 1x : "Hold" : measure holding
- 2x : "Min/Max" : display of minimum and maximum values from **channel 1** since last request.
- 3x : "Min/Max" : display of minimum and maximum values from **channel 2** since last request.
- 4x : **Back** to held measure.

"On / off" key

ON : Switch-on
OFF : Switch-off
Escape : Return to previous screen

"Backlight" key

- 1x Level 1
- 2x Level 2
- 3x No backlight

Functions available from VELOCITY main screen

	LV101	LV107	LV110	
Average calculation	1x	1x	1x	(Select) → (OK) Start → (OK) Average value → (OK) Min/Max values
Select cone	2x			(Select) → (OK) → Press (Select) to scroll down cone list then validate with (OK) , Airflow screen is displayed (LV101).
			2x	(Select) → (OK) Airflow screen is displayed (LV110).
Ø of circular area	3x	2x	3x	(Select) → (OK) → Press (Select) to select " Circ. " and press (OK) ↳ Enter diameter with (Select) ⇒ Validate with (OK) , airflow screen is displayed.
Dimensions of rectangular area	3x	2x	3x	(Select) → (OK) → Press (Select) to select "Rect." and press (OK) ↳ Enter length with (Select) ⇒ Validate with (OK) ↳ Enter width with (Select) ⇒ Validate with (OK) , airflow screen is displayed.
Select air velocity units	4x	3x	4x	(Select) → (OK) → Press sur (Select) to scroll down units. ⇒ Validate with (OK)
Select temp. units	5x	4x	5x	(Select) → (OK) → Press (Select) to scroll down units. ⇒ Validate with (OK)
Automatic shut-off	6x	5x	6x	(Select) → (OK) → Press (Select) to scroll down minutes. ⇒ Validate with (OK)
Beep	7x	6x	7x	(Select) → (OK) → Press (Select) to activate or to desactivate ⇒ Validate with (OK)

 
Number of key pressing

Functions available from AIR FLOW main screen

Back to velocity menu	1x	(Select) → (OK) → In order to change dimensions or type of side wall vent
Select air flow units	2x	(Select) → (OK) → Press (Select) to scroll down units. ⇒ Validate with (OK)
Select temp. units	3x	(Select) → (OK) → Press (Select) to scroll down units. ⇒ Validate with (OK)
Automatic shut-off	4x	(Select) → (OK) → Press (Select) to scroll down minutes. ⇒ Validate with (OK)
Beep	5x	(Select) → (OK) → Press (Select) to activate or to desactivate. ⇒ Validate with (OK)

How to change battery

1. Remove the front part at the back of the instrument
2. Remove old battery
3. Insert the new battery in accordance with proper polarity drew inside the housing.
4. Replace the front.



Once returned to KIMO, required waste collection will be assured in the respect of the environment in accordance to 2002/96/CE guidelines relating to WEEE.

www.kimo.fr

EXPORT DEPARTMENT

Boulevard de Beaubourg - Emerainville - BP 48
77312 MARNE LA VALLEE CEDEX 2

Tel : + 33.1.60.06.69.25 - Fax : + 33.1.60.06.69.29

