


Supports

Support brackets are used to fix equipment such as thermostats or junction boxes on pipes. Support brackets require additional pipe straps which are to be ordered separately.

They include a set of M6 and/or M4 fixing screws, nuts, washers and spring lock washers for the fixation of one junction box or thermostat.


The table below outlines the typical compatibility of each bracket with relevant equipment, for other equipment please contact your Tyco Thermal Controls representative.

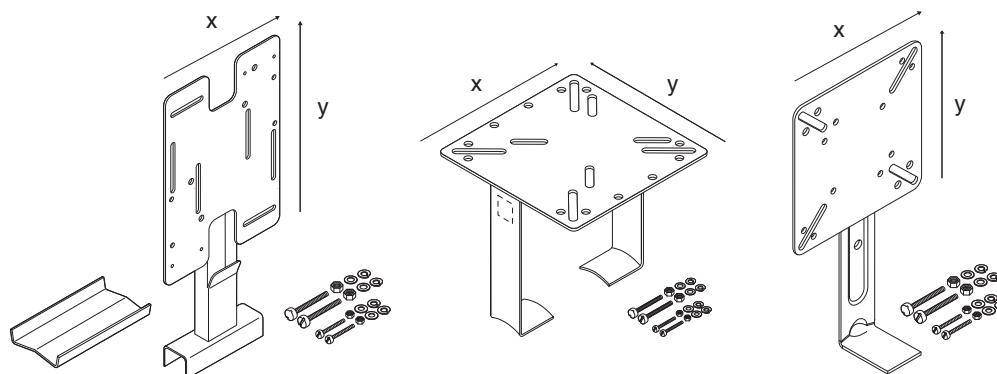

	SB-100 192932-000	SB-101 990994-000	SB-110 707366-000
AT-TS-13	x	x	x
AT-TS-14	x	x	x
JB16-02	x	x	x
JB-82	x	x	x
JB-EX-20	x	x	x
JB-EX-21	x	x	
JBU-100-E	x	x	
JBU-100-EP	x	x	
MONI-PT100-EXE		x	
MONI-PT100-NH		x	
MONI-PT100-4/20MA		x	
RAYSTAT-CONTROL-10	x	x	
RAYSTAT-ECO-10	x	x	
RAYSTAT-EX-02	x	x	x
RAYSTAT-EX-03	x	x	
RAYSTAT-EX-04	x	x	
T-M-10-S/+x+y	x	x	x
T-M-20-S/+x+y			

Technical data

plate size (mm) x x y	160 x 230	160 x 160	130 x 130
distance pipe-plate (mm)	100	160	100
number of pipe straps required	2	2	1
max. pipe temperature (°C)	230	230	230

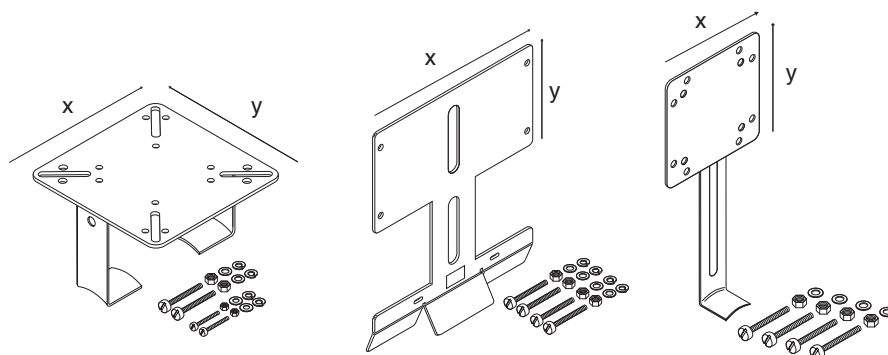

	SB-111 579796-000	SB-120 165886-000	JB-SB-26 338265-000
AT-TS-13	x		
AT-TS-14	x		
JB16-02	x		
JB-82	x		
JB-EX-20	x		
JB-EX-21			
JBU-100-E			
JBU-100-EP			
MONI-PT100-EXE	x		x
MONI-PT100-NH	x		x
MONI-PT100-4/20MA	x		x
RAYSTAT-CONTROL-10			
RAYSTAT-ECO-10			
RAYSTAT-EX-02	x		
RAYSTAT-EX-03			
RAYSTAT-EX-04			
T-M-10-S/+x+y	x		
T-M-20-S/+x+y		x	

Technical data

plate size (mm) x x y	130 x 130	220 x 120	80 x 80
distance pipe-plate (mm)	100	120	100
number of pipe straps required	2	2	1
max. pipe temperature (°C)	230	230	230