




■ Installation Diagram

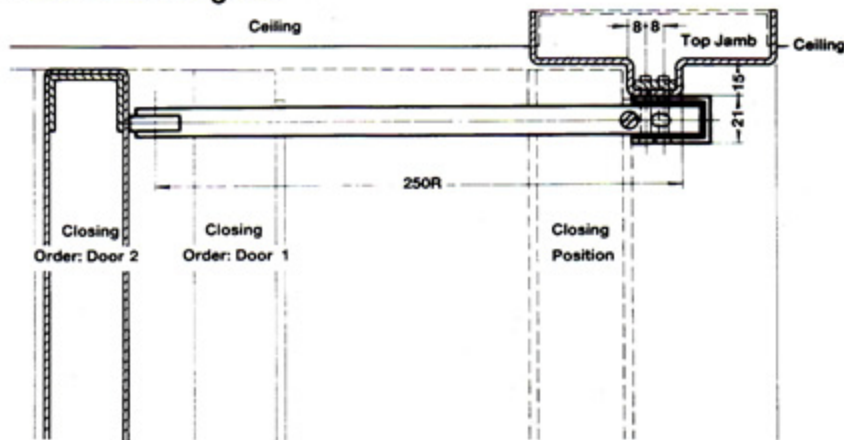

(VIEW FROM BOTTOM)

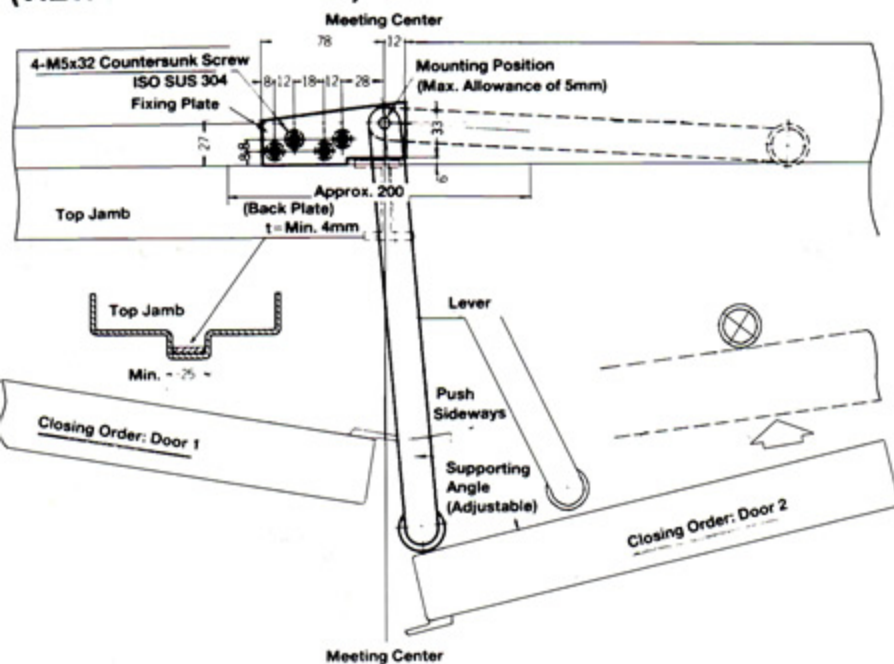

Adjustment

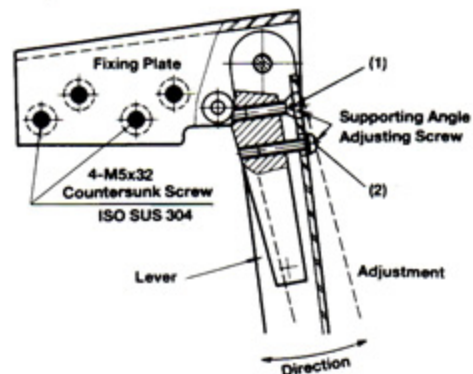

When the supporting angle of the lever is not satisfactory, due to a pair door, irregular door widths or any gap at the meeting center of the doors, adjustments can be made by turning the adjusting screws (1) and (2) at the base of the lever.