

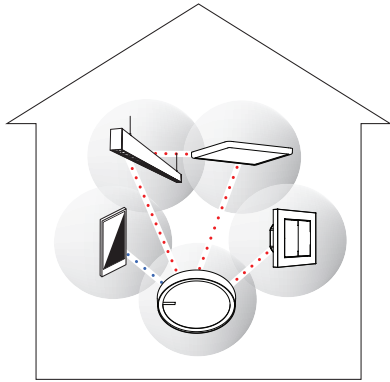
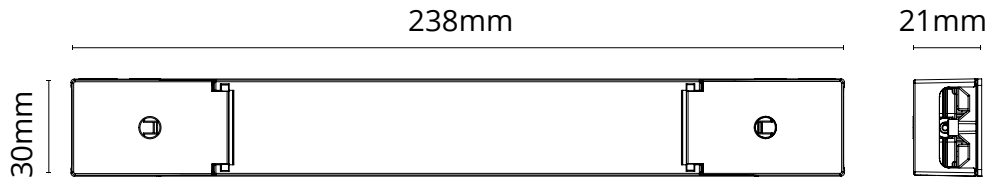


Connect Bridge Kit

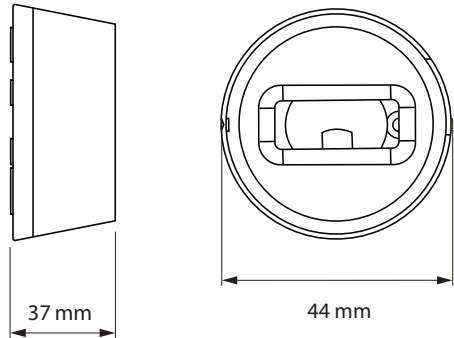

220-240V~ 50/60Hz

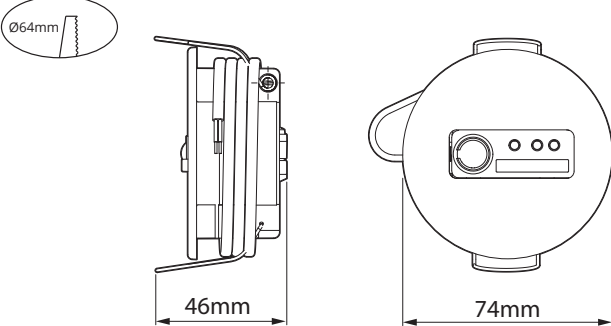

 SG Connect Commissioning  SG Connect User  	 Range: 10m in open air	 
		
Surface 	Recessed 	
NO: Kan kun installeres og vedlikeholdes av en registrert installasjonsvirksomhet. DK: Må kun installeres og vedlikeholdes af uddannet elektriker. SE: Skall installeras och underhållas av behörig elektriker. EN: Only to be installed and maintained by an authorized electrician. FR: Doit être installé et maintenu par un électricien qualifié. NL: Mag alleen geïnstalleerd en onderhouden worden door een bevoegde elektricien. DE: Dieses Produkt darf nur durch autorisiertes Personal (z.B. Elektro-Installateur) angeschlossen, in Betrieb genommen und gewartet werden. FI: Asentaa ja huoltaa saa vain valtuutettu sähköasentaja NO: Skru av strømmen før montering. DK: Sluk for strømmen inden montering. SE: Stäng av strömmen innan montering. EN: Turn off power before installing. FR: Couper le courant avant l'installation. NL: Stroom uitschakelen voor u het toestel installeert. DE: Vor Installationsarbeiten den Strom abschalten. FI: Sammuta virta ennen kytkemistä		

NORWAY

SG Armaturen AS

Skytterheia 25
N-4790 Lillesand

Tel: +47 37 50 03 00
firmapost@sg-as.no
www.sg-as.no

SWEDEN

SG Armaturen AB
Tel: +46 31 81 71 10
info@sg-ab.se
www.sg-ab.se

DENMARK

SG Armaturen A/S
Tel: +45 70 70 72 13
info@sg-as.dk
www.sg-as.dk

GERMANY

SG Leuchten GmbH
Tel: +49 40 23 99 44 59
info@sg-leuchten.de
www.sg-leuchten.de

FINLAND

SG Armaturen Oy
Tel: +358 02 07 30 39 60
info@sg-oy.fi
www.sg-oy.fi

FRANCE

SG Lighting SA/NV
Tel: +33(0) 4 94 93 00 00
info.france@sglighting.fr
www.sglighting.net

BENELUX

SG Lighting SA/NV
Tel: +32(0) 15 20 72 71
info.benelux@sglighting.net
www.sglighting.net


SWITZERLAND

SG Leuchten SA
Tel: + +41 44 868 20 00
info@sg-leuchten.ch
sg-leuchten.ch


INTERNATIONAL

SG Lighting Co Ltd.
Tel: +86 769 88 49 20 88
cindy@sgdgc.com
www.sg-as.com


ON/OFF + DALI BROADCAST, MAX 400VA, 20 DALI ECG

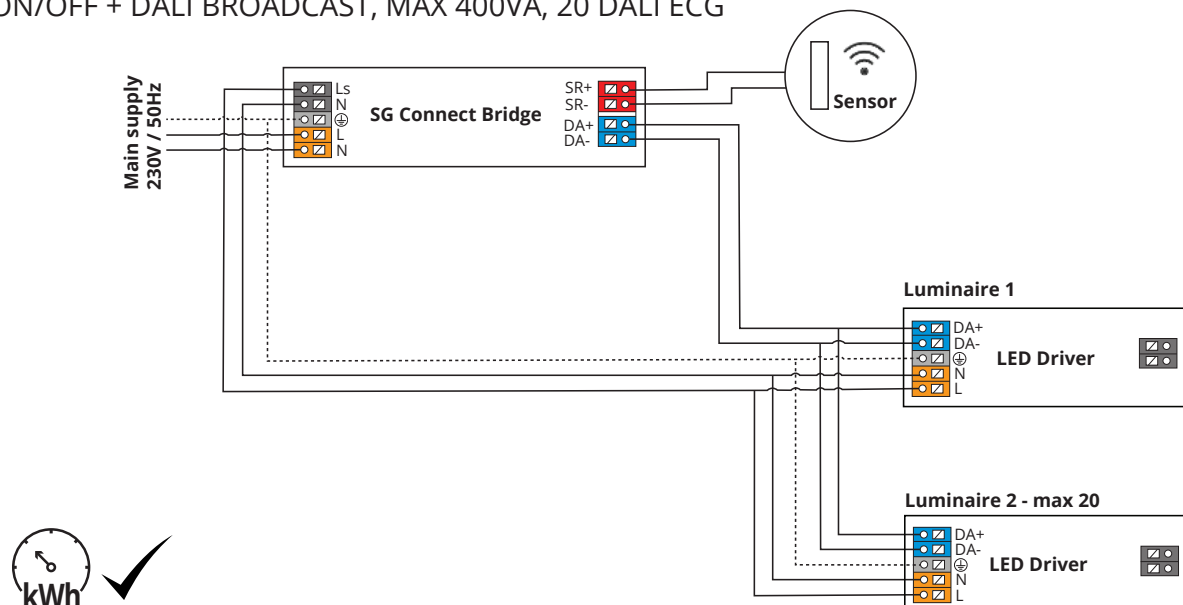


DALI BROADCAST, MAX 20 DALI ECG

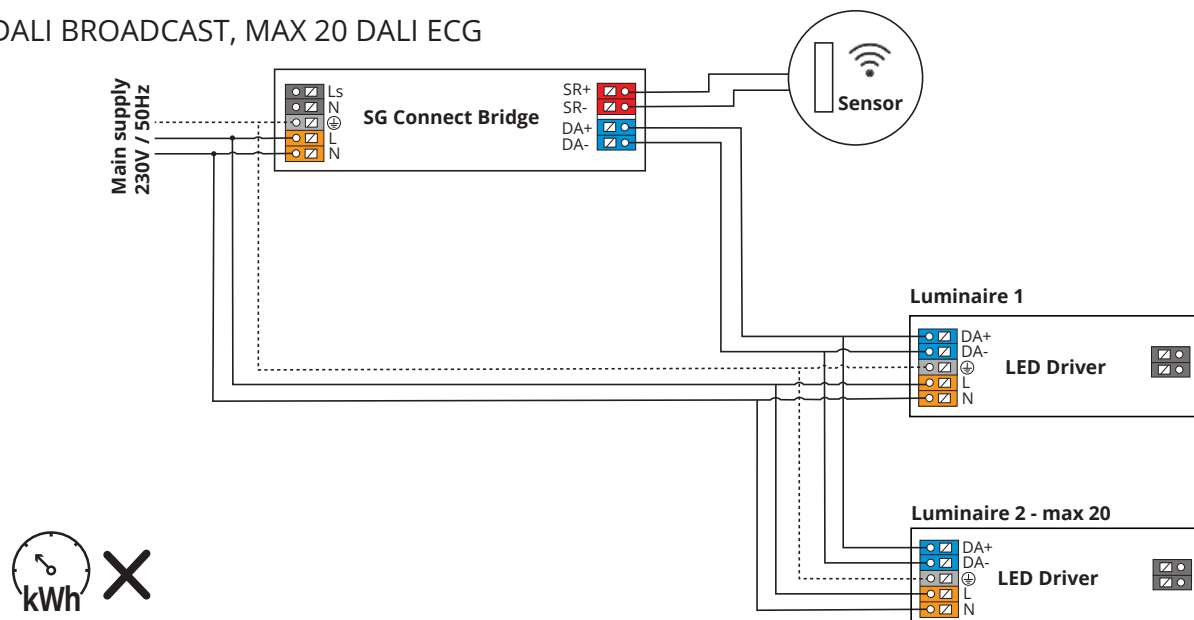


ON/OFF, MAX 400VA

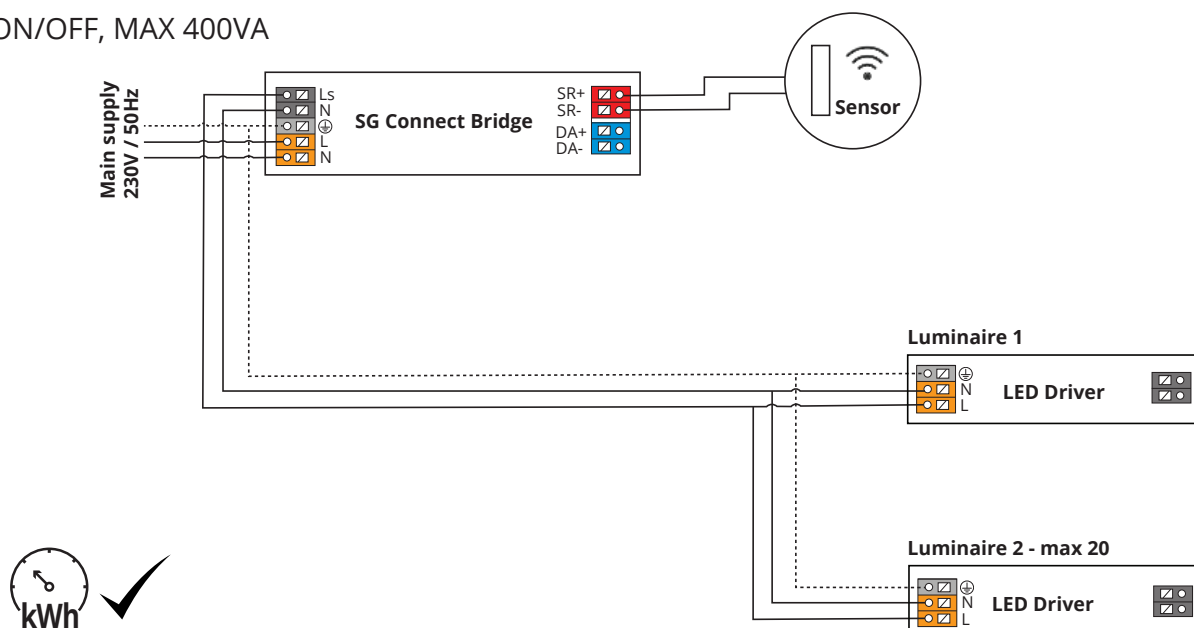

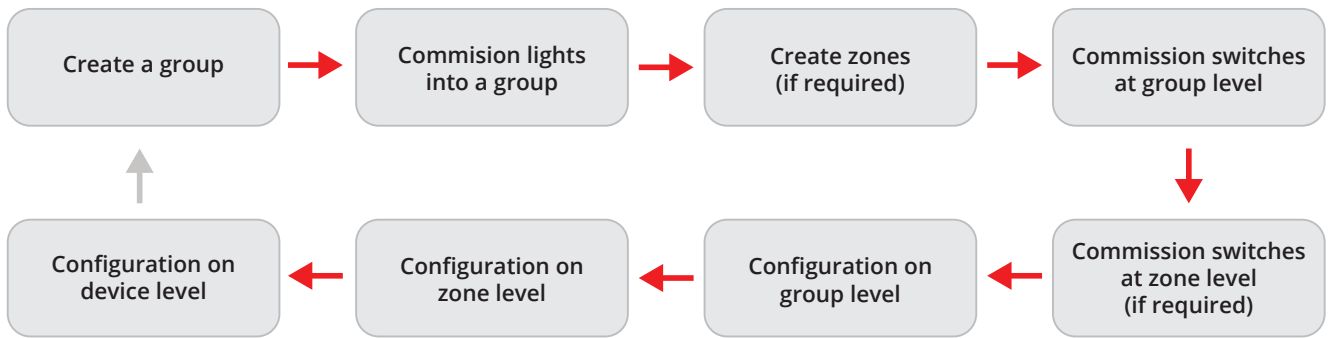


1 Login


1.1

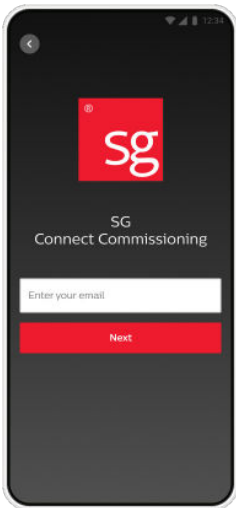


1.2

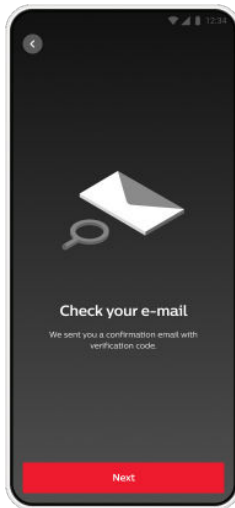

1.3

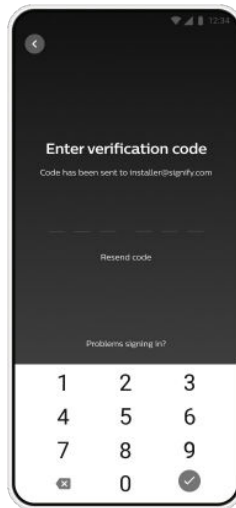


1.4

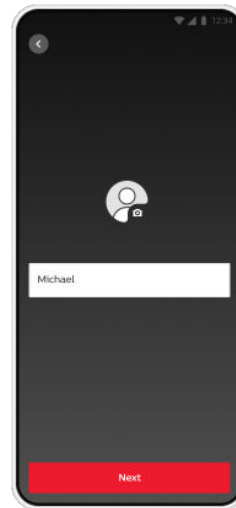


2 Create Group


2.1

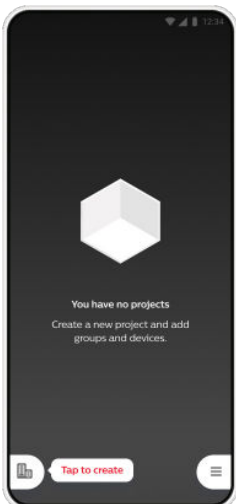


2.2

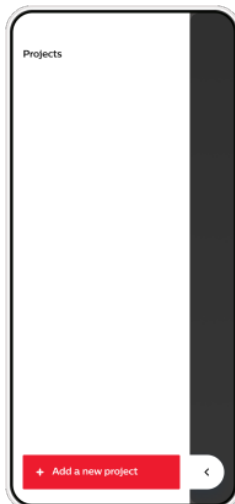


2.3

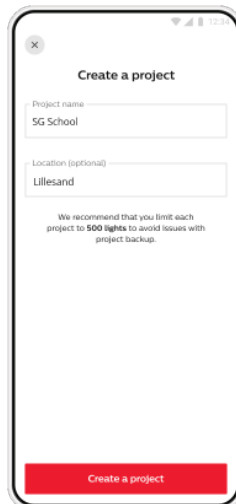


2.4

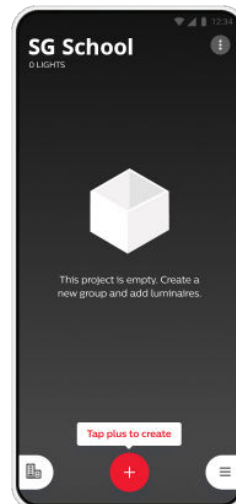

2.5

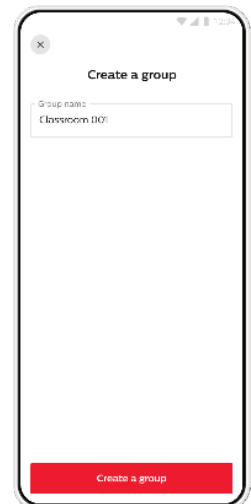

2.6

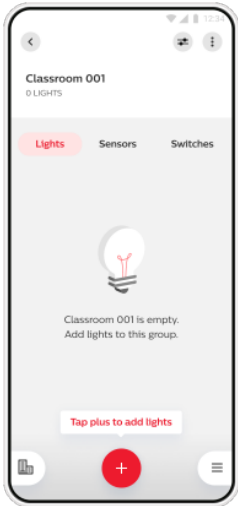


2.7




3 Torchlight Commissioning


3.1

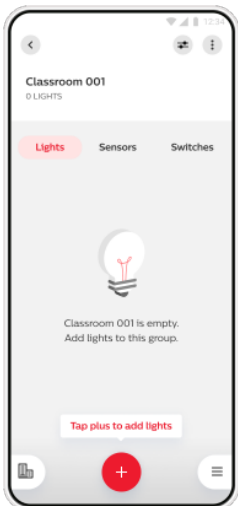


3.2

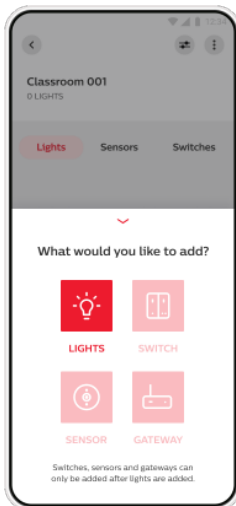


3.3

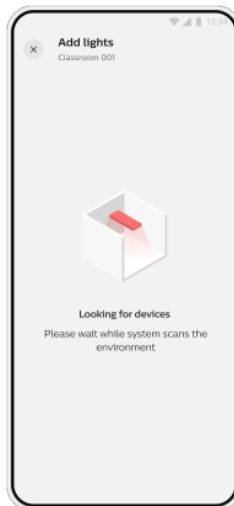


3.4

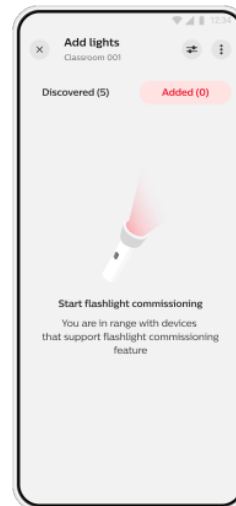


3.5

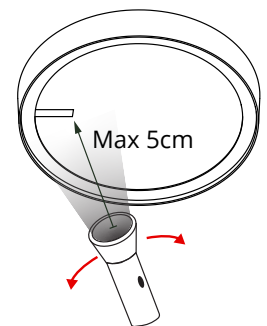

3.6

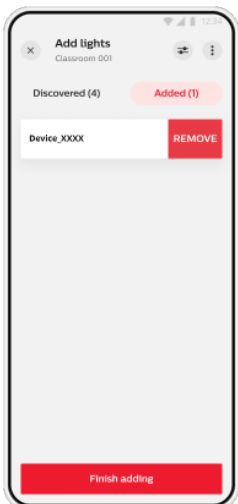


3.7

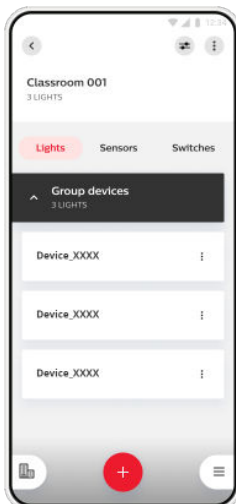


4 List Based Commissioning


4.1

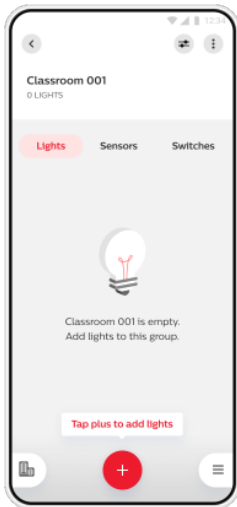


4.2

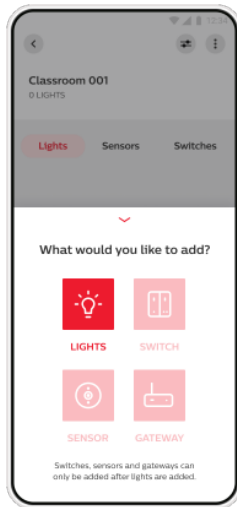


4.3

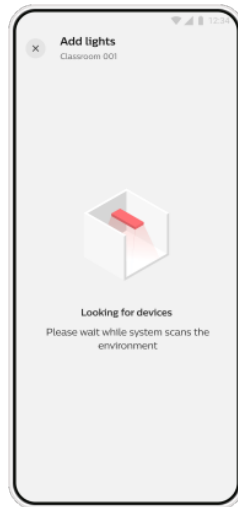

4.4

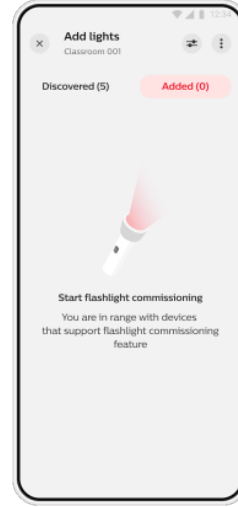


4.5

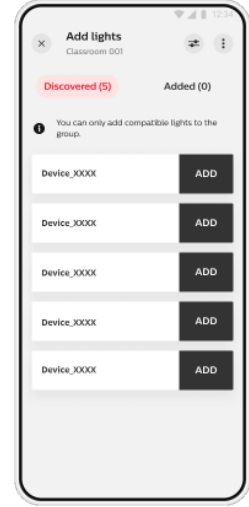


4.6



4.7

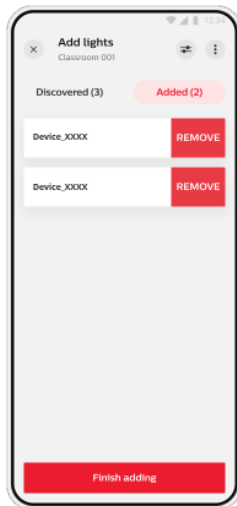


4.8

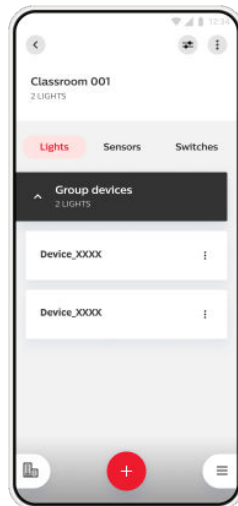


5 Create Zone


5.1

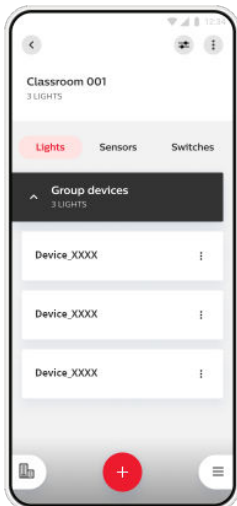


5.2

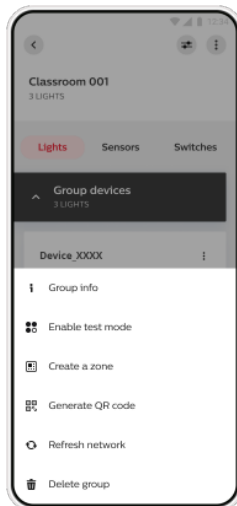


5.3

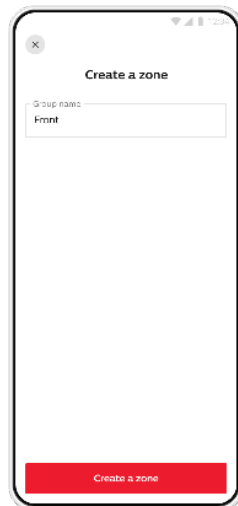


5.4

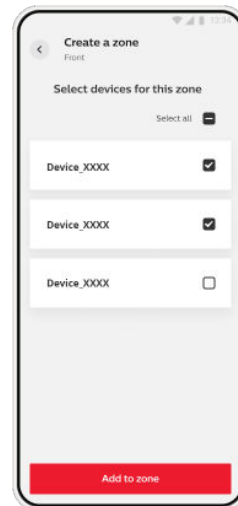

5.5

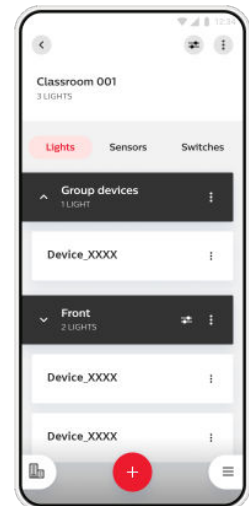

6 Detection

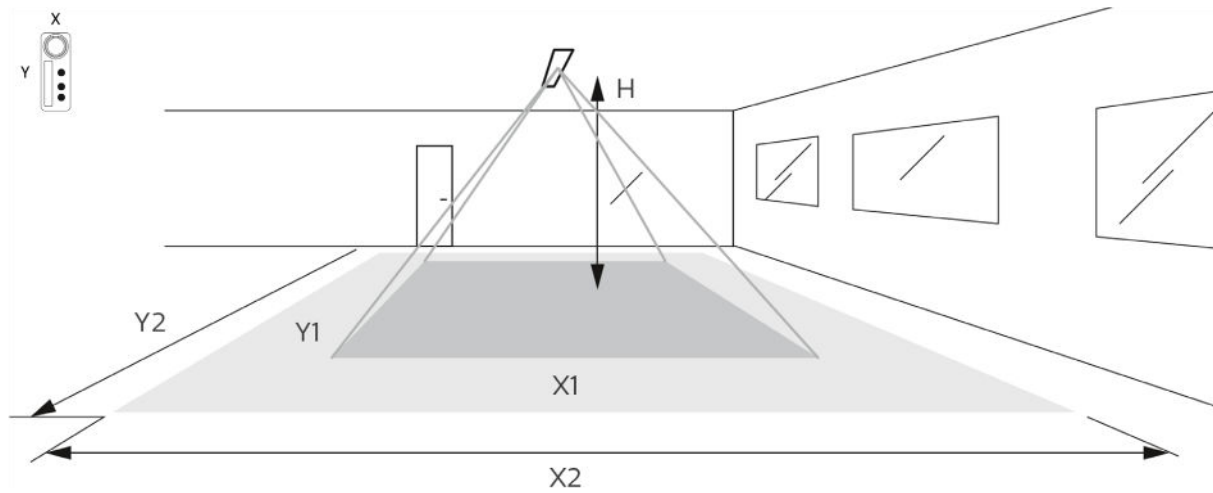

	Minor Movements		Major Movements	
H (m)	X1 (m)	X1 (m)	X2 (m)	Y2 (m)
2,4	1,9	2,9	2,9	4,3
3	2,4	3,6	3,6	5,4