




Wiring and Configuration

Card Reader
Vanderbilt VR40s

Door Controller
SPCA210

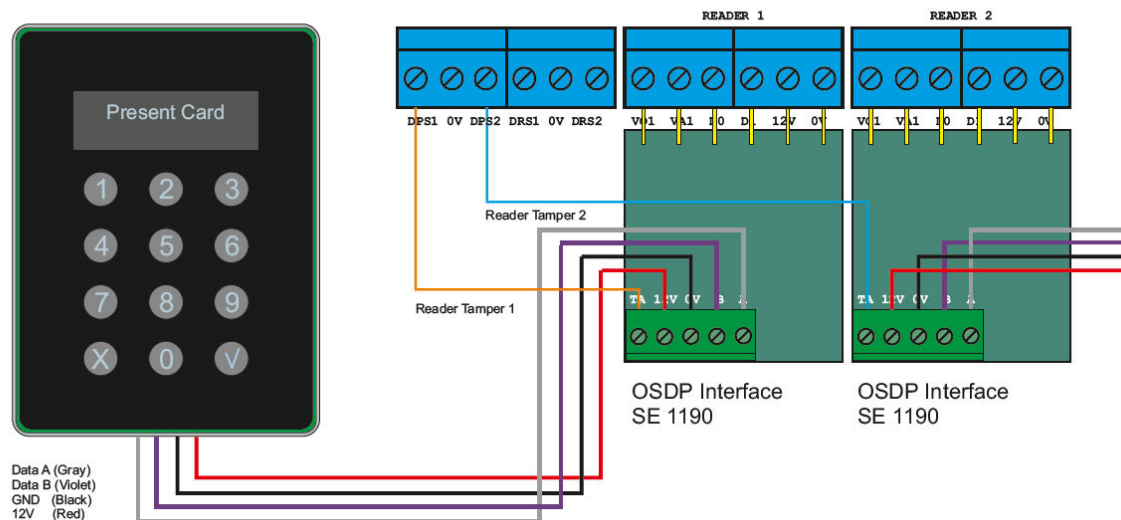

SPC Configuration

To Configure the OSDP converter the reader profile must be set to "AR618X", this is configured through the web page Configuration->Hardware->xbus->Door Controllers->[door]->reader profile.

Arming requires the use of the Setting prefix option

Program: DIP1 DIP2 DIP3 DIP4

OSDP to Wiegand - Text: EN	Off	Off	Off	Off
OSDP to Wiegand - Text: DK	On	Off	Off	Off
OSDP to Wiegand - Text: SE	Off	On	Off	Off
OSDP to Wiegand - Text: NO	On	On	Off	Off
OSDP to Wiegand - Text: FI	Off	Off	On	Off
OSDP to Wiegand - Text: FR	On	Off	On	Off
OSDP to Wiegand - Text: DE	Off	On	On	Off
OSDP to Wiegand - Text: ES	Off	On	On	Off
OSDP to Wiegand - Text: NL	Off	Off	Off	On
OSDP to Wiegand - Text: IT	On	Off	Off	On
OSDP to Wiegand - LEDs only	On	On	On	On